

# Rollerball Refill Replacement

First, how do you know if your pen is a ballpoint or a rollerball? All Pen Studio rollerball and fountain pens have a removable cap to prevent the thinner inks used in both rollerball ink cartridges and fountain pen ink from drying out. Our ballpoints do not have caps. All Pen Studio rollerballs use Schmidt 5888 ink cartridge refills, however, other compatible brands are available.

The refill can be replaced by unscrewing the tip (nib) or tail end of the pen, retaining the spring inside the tail (small end toward the refill). Insert the new refill and screw the pen back together. If it is difficult to screw due to tension, loosen the opposite end a little. Finish screwing on the piece you are replacing and then retighten the loosened end.

Schmidt 888 Safety ceramic roller refills, Schneider Topball 850 or Hauser 707 SF will also work and are a bit less expensive due to the plastic body. Refills come in Blue or Black ink with F (fine) or M (medium) tip.

